













GTS-TIM-V Timer Switch Instructions

ver 1.0


LCD symbols



Symbol	Event	Symbol	Event
	The buttons are locked		Power button, to turn on/off the timer switch
	Temporary override		Menu button, to enter into menu settings
	Automatic mode		Program button, to program your thermostat
	Manual mode		To confirm your settings
	To increase the set value		To set time and day
	To decrease the set value		To move to the next setting options



Configuration Menu

To enter into the setting menu please follow the steps below:

Step 1, Turn the timer switch off by pressing  ;

Step 2, Press  , you will then see menu 1. At this step, if you press and hold  , you will access to MENU 3 directly.

Step 3, Use the up and down arrows to adjust Menu 1

Step 4, Press  to move to the next Menu and once you have all the menu options set,




Step 5, Press  to accept and store.

Menu #	Feature	Explanation	Adjustment (press up & down buttons to adjust)
1	Clock Format	You can select the clock to show in either 12 or 24 hour time	24 (default), 12
2	Program Mode	This allows you to program either 5 days at once, then the 2 days of the weekend separately, or a full 7 days at the same time or 7 days separately, or countdown timer only	01 = 5+2 day programmable 02 = 7 day programmable(default)
3	Reset	This allows you to reset your timer switch to factory default	Press and hold the down button until you see RES on screen

Setting the clock and day of the week

This timer switch is fitted with a real time clock. It is essential that the clock time and day are set accurately if you require your programmed events to start on time.

To set follow the steps below:

- 1 Press  and the time will start flashing. Use the up and down arrows to set the time. By holding the arrow down the time will change faster.
- 2 Press  to move to the Day setting and use the up and down arrows to get to the correct day.
- 3 Press  to store and exit.

GTS-TIM-V Timer Switch Instructions

ver 1.0

Setting the Program Schedules

This timer switch has the ability to program each individual day of the week separately, or program 7 days of the week at once. You can also program weekdays (5 days) to one schedule and then weekends (2 days) to a different schedule. See the Menu information for details on how to set this up. (refer to Menu 2)

Program	Start Time	Setpoint
1	05:00	ON
2	08:00	OFF
3	16:30	ON
4	21:00	OFF

Above are default program schedules, to make changes, follow easy steps as below.

1 Press **SCHDL** and the day display will start flashing. (If your timer switch is set to 5+2 day programmable mode, the programming will skip to step3)

2 Use **▲** or **▼** to adjust the day of the week you want to start programming or to the day you wish to edit an existing event / program.
(Press **1-7** to select all 7 days of the week, and to cancel press **1-7** again.)

3 Press **NEXT** the LCD screen will show the time flashing for Program 1.

4 Use **▲** and **▼** to adjust the time you wish the Program 1 event to commence for the selected day/days .

5 Press **NEXT** and the ON or OFF display will start flashing.

6 Use **▲** and **▼** to choose the ON or OFF status to be maintained during Program 1.


7 Press **NEXT** and the LCD screen will show the time flashing for Program 2 , this signifies that the second daily event is now ready to be programmed.

Repeat steps 4,5,6 to set the remaining programs/events, then press **OK** to store and exit.

Hint: During setting programs, press **DEL** will clear a program entry and your timer switch will maintain the setpoint of the last executed program until the beginning of the next program.

Auto / Manual Mode

Press and hold **SCHDL** for 5 seconds to switch between Auto/Manual mode.

In Manual mode (), the timer switch maintains a constant set status manually set by the user. In Auto mode, the timer switch executes the preprogrammed schedules.

Lock the Keypad

To lock the keypad, press and hold **POWER** for about 5 seconds, you will see a lock symbol  . To unlock, repeat the steps above and the lock symbol will disappear.

Temporary Override

Press **▲** or **▼** the ON / OFF display will start to flash. Use **▲** or **▼** to adjust.

Press **OK** to accept, and you will see " **OVERRIDE** " above the ON or OFF display. The timer switch will maintain the new set value until the next programmed event.



To cancel the override setting, press **RUN SCHDL** .

Installation and Wiring

Carefully separate the front half of the timer switch from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the timer switch.

Carefully unplug the ribbon connector which is plugged into the front half of the timer switch. Place the timer switch front half somewhere safe. Terminate the timer switch as shown in the diagrams below.

Screw the timer switch back plate on to the flush box
Re-connect the timer switch ribbon cable and clip the two halves together.

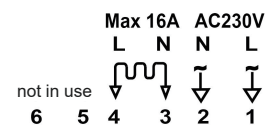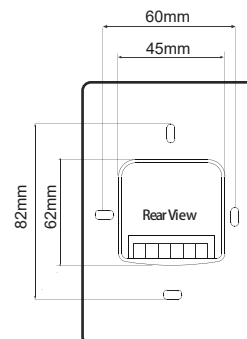

This product should be installed by a qualified electrician.